



Instructions:

Cleaning the Machine

After Every Use:

1. Make sure all switches are turned off and unplug machine.
2. Allow all surfaces to cool.
3. Sweep crumbs and kernels out of machine.
4. Remove and empty crumb tray.
5. Wipe off surfaces with cleanser (**non-bleach non-ammonia**).

After 3-4 uses:

1. Unplug the Kettle power cord.
2. Lift Kettle out of machine.
3. Clean inside of Kettle using wet cloth.*
4. Place Kettle back in machine and reconnect plug.

*Do not submerge Kettle in water!

(Popping instructions on other side)